

PLASTER HOUSING TO WOOD HOUSING CONVERSION




1. With an 1/8" drill bit drill out the center of the four rivets that secure the bottom pan and plaster frame to the housing.

2. The plaster frame may be discarded or returned to SLI.

3. With the bottom pan removed, fasten the four supplied butterfly brackets by screwing the supplied thumbscrews through the slotted holes from inside the housing.

4. Using the four supplied rivets reattach the bottom plate to the housing.

5. Fixture may now be installed with hanging bars per wood ceiling installation instructions. Hanger bars are not included and must be supplied by installing contractor.

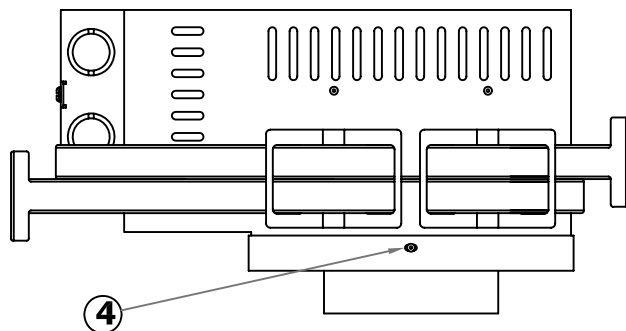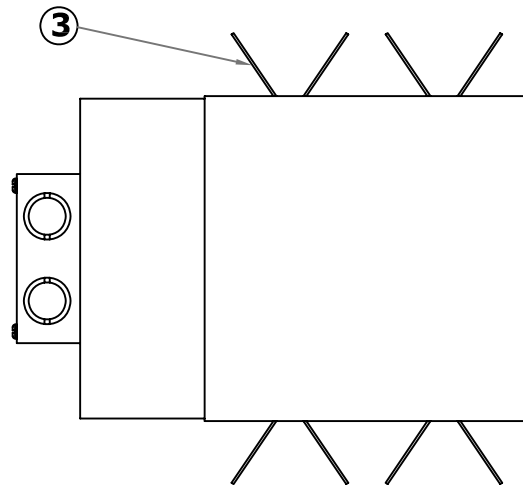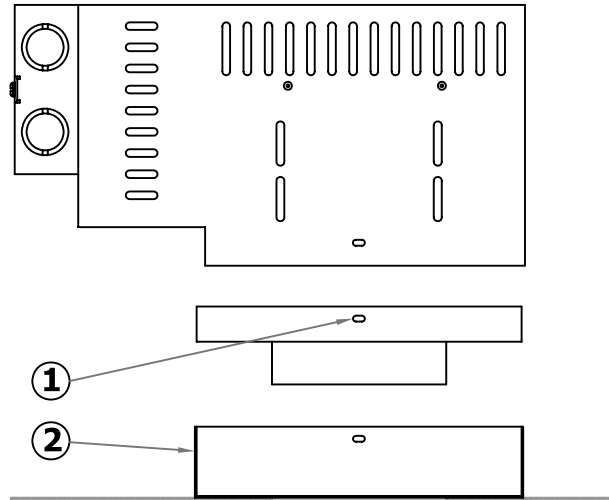

SPECIALTY LIGHTING

INDUSTRIES, INC. © 12/07

1306 DORIS AVENUE, OCEAN, NJ 07712 USA

800.462.7812

www.specialtylightingindustries.com

732.517.0800 FAX 732.517.0971

These specifications subject to change without notice.