


2002-IH INSTALLATION

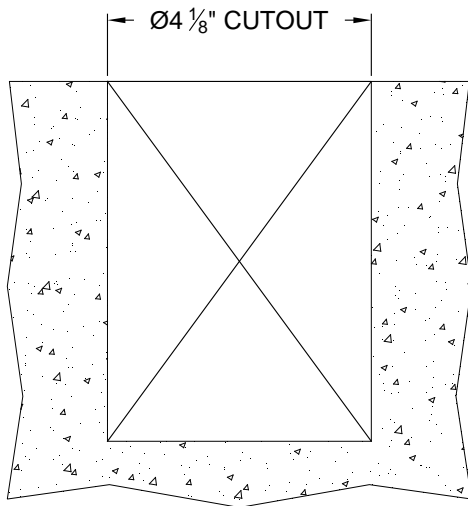

1. Block a cavity in the floor before concrete is poured according to cutout dimensions as indicated on submittal drawing. Blocking material is left to the discretion of the installer, typically wood or styrofoam is used. The cavity should be at minimum 3/8" inch deeper than the depth of the fixture indicated on the submittal drawing.

2. Be sure the proper size conduit is run to the slot to allow wiring of the fixture. Feed location will be can be interchanged from either the bottom or side of fixture.


3. After concrete has set remove blocking material.

4. Wire fixture to power feed.

5. Place fixture in cavity and shim as necessary to level fixture with the floor.

6. If fixture is MR16 install lamp.

7. Test fixture with power to ensure proper operation.

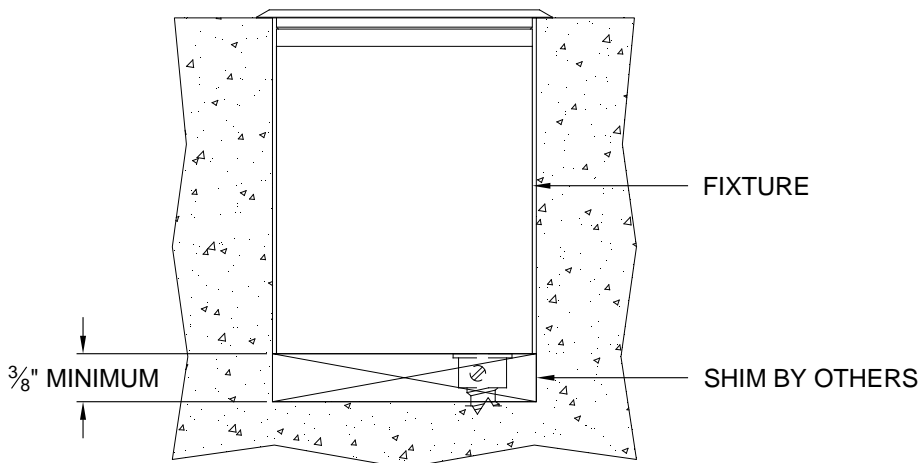

**SPECIALTY LIGHTING
INDUSTRIES, INC.**

1306 DORIS AVENUE, OCEAN, NJ 07712 USA
P130701

www.specialtylightingindustries.com

800.462.7812 732.517.0800 FAX 732.517.0971