

## PLASTER HOUSING TO WOOD HOUSING CONVERSION




**1. With an 1/8" drill bit drill out the center of the four rivets that secure the bottom pan and plaster frame to the housing.**

**2. The plaster frame may be discarded or returned to SLI.**

**3. With the bottom pan removed, fasten the four supplied butterfly brackets by screwing the supplied thumbscrews through the slotted holes from inside the housing.**

**4. Using the four supplied rivets reattach the bottom plate to the housing.**

**5. Fixture may now be installed with hanging bars per wood ceiling installation instructions. Hanger bars are not included and must be supplied by installing contractor.**

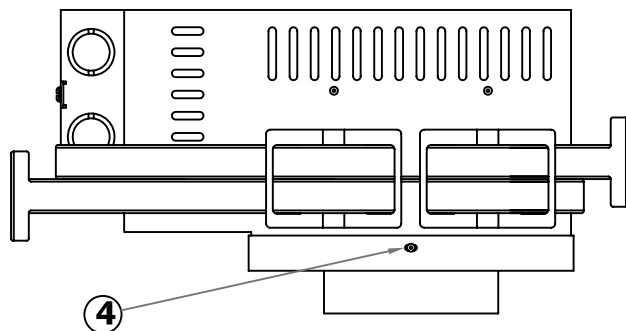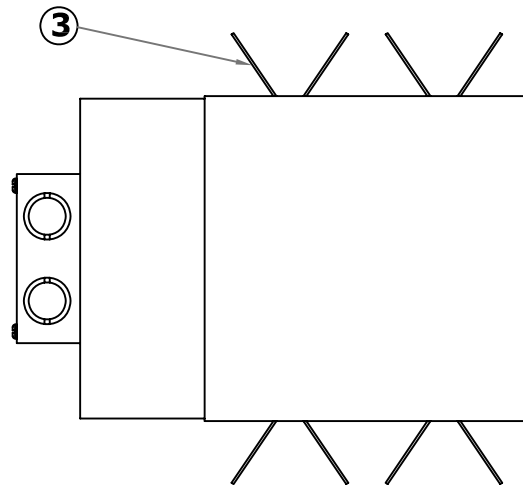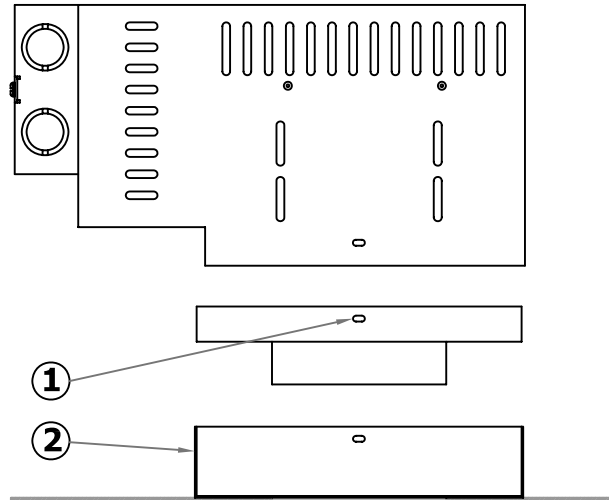

SPECIALTY LIGHTING  
INDUSTRIES, INC. © 12/07

1306 DORIS AVENUE, OCEAN, NJ 07712 USA

800.462.7812

[www.specialtylightingindustries.com](http://www.specialtylightingindustries.com)

732.517.0800 FAX 732.517.0971

These specifications subject to change without notice.