




**Step 1-** Install Drywall

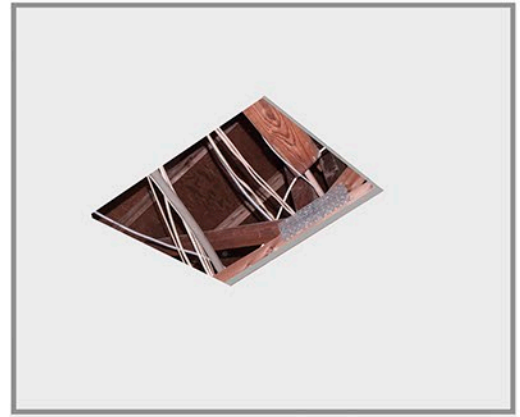


**Step 2-** Cut out opening in Drywall.  
\*Review Project submittal for exact cutout dimension requirements.



**Step 3-** After cutout, install blocking and prepare housing for install




**Step 4-** Connect all wiring for housing before anchoring housing to supports.

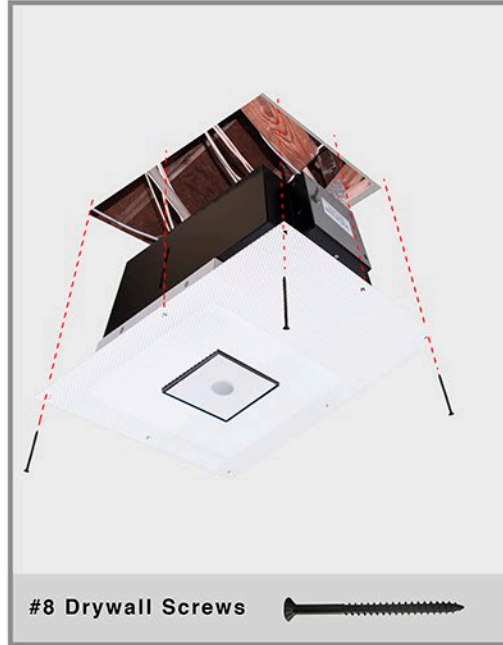

**#8 Drywall Screws** 

**Step 5-** Drill holes in Drywall. Anchor housing with #8 Drywall screws to structural supports.

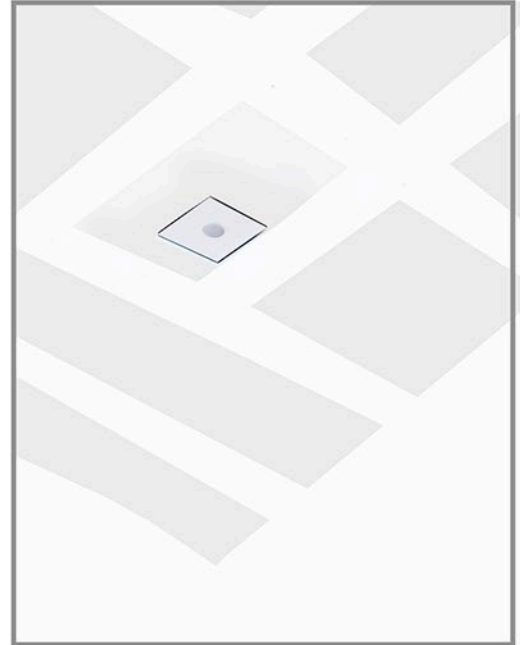


**Step 6-** Apply tape & joint compound over plaster flange and sand / finish



\*Trim in view is 1240


**Step 7-** Remove plaster plug. Install trim into housing... Finished.

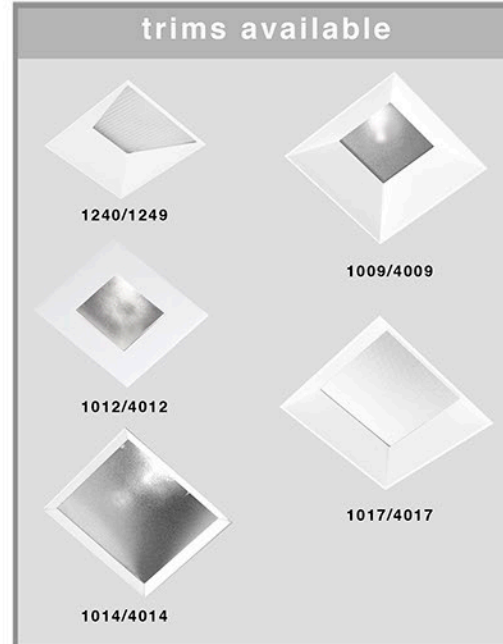


trims available



1240/1249

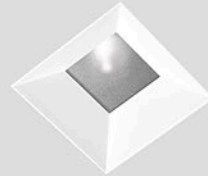


1009/4009

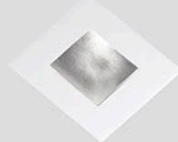

1012/4012



1017/4017

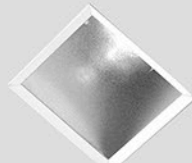

1014/4014

**Plaster Flangeless  
Square Trim  
Instruction Sheet for  
1009/4009  
1012/4012  
1014/4014  
1017/4017  
1240/1249  
Ceiling Installation**

